

Air Research Technology Inc.
Maintenance Manual Supplement
No. MMS20510
Issue 1 April 21, 2002

Cessna 210,210-5,210-5A,210A,B,C,D,E,F and T210F models modified
by installation of WingExtensions in accordance with Transport
Canada STC Approval Number SA 01-33

The information and data contained in this document supersede or
supplement that contained in the basic Maintenance Manual in those
areas listed herein. For procedures not contained in this
document refer to the Approved Maintenance Manual or any other
Approved Maintenance Manual Supplements.

Air Research Technology Inc.
3440 McCarthy St.
Montreal, QC
Canada H4K 2P5

(888) 325 2588 ph
(514) 337 7588 ph
(514) 337 3293 fax
www.wingxstol.com

Air Research Technology Inc.
Maintenance Manual Supplement
No. MMS20510
Issue 1 April 21, 2002

Table of Contents

Title	Section	Page
Description	1.0	3
Installation Procedures	2.0	3
Pre-flight Inspection	3.0	3
Periodic Inspection	4.1-4.2	4
Periodic Inspection	4.3-4.5	5
Weight and Balance	5.0	6
Required Placards	6.0	6
Repairs	7.0	6

Air Research Technology Inc.
Maintenance Manual Supplement
No. MMS20510
Issue 1 April 21, 2002

1. DESCRIPTION

The A.R.T. WingExtensions increase the wing span by 36 inches and provides additional lift. The WingExtensions are conventional sheet metal construction, and they attach to the wing tip with machine screws. In addition, the main wing spar is reinforced from wing station 91 to 109 and from wing station 128 to 160

2. INSTALLATION PROCEDURES

INITIAL INSTALLATION: The initial installation of the WingExtensions is addressed in installation drawing R1582-205-210 and SR100-205-210. During the initial installation of WingExtensions on a specific aircraft the weight and balance report must be amended to show the installation as an optional configuration. Initial installation requires permanent reinforcements to be installed in the wing.

SUBSEQUENT REMOVAL: Subsequent removal of the WingExtensions for maintenance or other purposes requires only hand tools. The wing spar reinforcements are permanent and should never be removed.

SUBSEQUENT INSTALLATION: Subsequent installation of the WingExtensions requires only hand tools. When installing the WingExtensions use only p/n AN525-832R8 machine screws. Ensure that the navigational lights and strobes (if installed) function correctly before releasing the aircraft.

3. PREFLIGHT INSPECTION

The pilot's pre-flight inspection must include a visual inspection of the WingExtension for missing or loose fasteners and physical damage.

Air Research Technology Inc.
Maintenance Manual Supplement
No. MMS20510
Issue 1 April 21, 2002

4. PERIODIC INSPECTION

A following items must be inspected at the annual inspection:

Item	Area to be Inspected	Inspection Action	Initial
1	Main Spar lower surface reinforcement at Wing Station 100. Required only on those A/C not equipped with angle stiffener. Refer to A.R.T.drawing No:SR100-205-210 or Installation Instruction guide No: 205-210. for details.	Visual inspection for loose or missing fasteners, cracks, and corrosion. Treat any corrosion per AC43.13-1B. Loose rivets must be replaced with CR-3243-6-6 or -7 as applicable.	
2	Main Spar upper surface reinforcement at Wing Station 128 to 160.	Remove inspection panels and visually inspect all structural elements for loose or missing fasteners, cracks, and corrosion. Treat any corrosion per AC43.13-1B. Replace fasteners if required..	

Air Research Technology Inc.
Maintenance Manual Supplement
No. MMS20510
Issue 1 April 21, 2002

3	Intentionally left BLANK		
4	WingExtensions	Visual inspection for missing or loose fasteners and physical damage and corrosion.	
5	Placards	Visually inspect to ensure that the required cockpit placards are installed in full view of the pilot (see section 6 for required placards)	

Air Research Technology Inc.
Maintenance Manual Supplement
No. MMS20510
Issue 1 April 21, 2002

5. WEIGHT AND BALANCE

The following typical weights are provided for reference only.
USE ACTUAL MEASURED WEIGHTS

ITEM	Total Weight (lbs)	Arm (in aft of datum)	Moment (in.lbs.)
WingExtensions	16	52	832

6. REQUIRED PLACARDS

The following placards must be installed adjacent to the airspeed indicator when the WingExtensions are installed:

"WHEN OPERATING AT INCREASE GROSS WEIGHT, MAXIMUM FLAP 30°"

For the Cessna 210,B,C,D,E,F and T210F Models, the following placard must be installed:

Cessna 210B,C,D,E,F & 210F
with A.R.T. "*WingExtensions* "
VNE 182 Kts IAS (210MPH)

7. REPAIRS

Repairs to the sheet metal structure may be accomplished in accordance with AC 43.13-1B.

For parts, placards, or information contact Air Research Technology Inc. at (888) 325 2588 or at www.wingxstol.com.